



PRODUCT USAGE AND INSTRUCTIONS

FREESIP® STAINLESS STEEL

INSTRUCTIONS FOR USE:

- Wash before using.
- Owala brand products are designed to be as simple and easy to clean as possible. Best practices for cleaning each part may vary.
- Lids: All lids are top-rack dishwasher safe and designed for easy cleaning. The spout gasket should be removed by using the convenient pull tab and cleaned separately. A sponge or straw brush can be used to access the nook or smaller spaces. Soaking the parts in distilled white vinegar beforehand will help breakup buildup in inaccessible areas. Always ensure all seals and gaskets are installed and properly sealed before use.
- Straws: The straws can be easily removed and put in the dishwasher's silverware bin.
- Cup: If the cup is made of Eastman Tritan™ plastic, feel free to put it on the dishwasher's top rack. If the cup is made of stainless steel, hand-wash with warm, soapy water.
- Avoid accidental opening of the bottle by keeping the button free and clear of other objects. Cover the button with the loop to help avoid accidental pushing of the button.
- Visit OwalaLife.com for additional information.

WARNINGS:

- Do not microwave, freeze, or boil.
- In order to minimize bacterial growth, do not use to store warm dairy products, baby food, or other perishable liquids.
- Not for use with hot, carbonated, or perishable liquids.
- Altitude changes (such as during airplane travel or while ascending mountains), or exposure to hot temperatures (such as leaving the bottle in a car on a hot day) may cause pressure to build up in the bottle and may cause the contents to leak or spray when opening the bottle. To prevent this, loosen the lid by a quarter turn to release pressure; then retighten the lid before drinking.
- Pressurized contents may cause the spout cover to open rapidly enough to injure fingers positioned in or near the recess behind the spout cover.
- When opening the bottle, keep fingers away from the recess behind the spout cover.
- Always open with caution.



PRODUCT USAGE AND INSTRUCTIONS

FREESIP® TRITAN

INSTRUCTIONS FOR USE:

- Wash before using.
- Owala brand products are designed to be as simple and easy to clean as possible. Best practices for cleaning each part may vary.
- Lids: All lids are top-rack dishwasher safe and designed for easy cleaning. The spout gasket should be removed by using the convenient pull tab and cleaned separately. A sponge or straw brush can be used to access the nook or smaller spaces. Soaking the parts in distilled white vinegar beforehand will help breakup buildup in inaccessible areas. Always ensure all seals and gaskets are installed and properly sealed before use.
- Straws: The straws can be easily removed and put in the dishwasher's silverware bin.
- Cup: If the cup is made of Eastman Tritan™ plastic, feel free to put it on the dishwasher's top rack. If the cup is made of stainless steel, hand-wash with warm, soapy water.
- Avoid accidental opening of the bottle by keeping the button free and clear of other objects. Cover the button with the loop to help avoid accidental pushing of the button.
- Visit OwalaLife.com for additional information.

WARNINGS:

- Do not microwave, freeze, or boil.
- Not for use with hot, carbonated, or perishable liquids.
- Altitude changes (such as during airplane travel or while ascending mountains), or exposure to hot temperatures (such as leaving the bottle in a car on a hot day) may cause pressure to build up in the bottle and may cause the contents to leak or spray when opening the bottle. To prevent this, loosen the lid by a quarter turn to release pressure; then retighten the lid before drinking.
- Pressurized contents also may cause the spout cover to open rapidly enough to injure fingers positioned in or near the recess behind the spout cover.
- When opening the bottle, keep fingers away from the recess behind the spout cover.
- Always open with caution.